

ORANGERX SERIAL PINOUT



GND	GND	3.3V	TX	RX	RESET
GND	GND	3.3V	TX	RX	RESET
GND	GND	3.3V	TX	RX	RESET
GND	GND	3.3V	TX	RX	RESET
GND	GND	3.3V	TX	RX	RESET
GND	GND	3.3V	TX	RX	RESET
GND	GND	3.3V	TX	RX	RESET
GND	GND	3.3V	TX	RX	RESET
GND	GND	3.3V	TX	RX	RESET
GND	GND	3.3V	TX	RX	RESET

GND	GND	3.3V	TX	RX	RESET
GND	GND	3.3V	TX	RX	RESET
GND	GND	3.3V	TX	RX	RESET
GND	GND	3.3V	TX	RX	RESET
GND	GND	3.3V	TX	RX	RESET
GND	GND	3.3V	TX	RX	RESET
GND	GND	3.3V	TX	RX	RESET
GND	GND	3.3V	TX	RX	RESET
GND	GND	3.3V	TX	RX	RESET
GND	GND	3.3V	TX	RX	RESET

GND	GND	3.3V	TX	RX	RESET
GND	GND	3.3V	TX	RX	RESET
GND	GND	3.3V	TX	RX	RESET
GND	GND	3.3V	TX	RX	RESET
GND	GND	3.3V	TX	RX	RESET
GND	GND	3.3V	TX	RX	RESET
GND	GND	3.3V	TX	RX	RESET
GND	GND	3.3V	TX	RX	RESET
GND	GND	3.3V	TX	RX	RESET
GND	GND	3.3V	TX	RX	RESET

GND	GND	3.3V	TX	RX	RESET
GND	GND	3.3V	TX	RX	RESET
GND	GND	3.3V	TX	RX	RESET
GND	GND	3.3V	TX	RX	RESET
GND	GND	3.3V	TX	RX	RESET
GND	GND	3.3V	TX	RX	RESET
GND	GND	3.3V	TX	RX	RESET
GND	GND	3.3V	TX	RX	RESET
GND	GND	3.3V	TX	RX	RESET
GND	GND	3.3V	TX	RX	RESET